

SURROUND by Laminex™

Plasterboard Wall



Quick Installation Guide

Surround by Laminex™ is a range of easy-to-install MDF wall panels that can be simply applied directly onto prepared plasterboard. This guide has been developed as a quick reference installation guide. For more comprehensive information, download the Fabrication & Installation Manual at laminex.co.nz

Step 1: Planning

IMPORTANT: Surround by Laminex is suited for interior applications only. If installing in a Internal Moisture Area (MR E0 MDF only), additional considerations and steps are required. Refer to section 6.9 of the Fabrication & Installation Manual.

For installation you will need:

Safety glasses
Face mask
Ear protection
Safety gloves
Tape measure
Pencil
Spirit level/laser level
10mm spacers

Stud finder
Circular saw
Jigsaw
Drill, nail gun or hammer
Screws or nails
Adhesives (refer to page 3)
Putty
Putty knife


Sanding sponge

Please ensure you wear appropriate PPE and use dusk masks, goggles or safety glasses in accordance with the appropriate AS/NZS standard.




- Measure out the height and length of the wall that the panels will be applied to. These measurements will allow you to calculate how many sheets are required for the installation.
- When cutting and trimming panels to size, allow for 10mm expansion gaps at the top and bottom of the panels.
- Refer to the Surround by Laminex brochure for panel sizes.

Step 2: Preparation

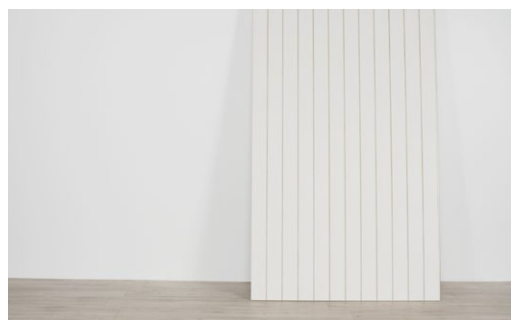

- Before installation, Surround by Laminex panels need to acclimatise for a minimum of 48 hours on site.

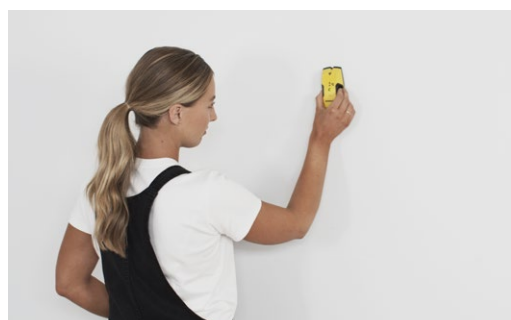

- When installing Surround by Laminex panels on a prepared plasterboard wall, the studs must be located using a stud finder – these will be used as the fixing points.
- Studs must be spaced at no more than 600mm apart. If your wall requires more re-enforcements, consult with qualified tradespeople to undertake any modifications.

Step 3: Installation



- To begin installation, start from the corner and work across the wall.
- Apply a generous amount of adhesive in the location of each stud and noggin. Recommended adhesives; Sikaflex®-123 MS Bond, Sika® Nailbond Premium, Gorilla 240FC or Gorilla MS Sealant.



- Then position the panel on the wall.
- Use spacers to ensure there is a 10mm expansion gap at the top and bottom of the panel.
- Using a spirit level/laser level, ensure the sheet is accurately positioned.



- When fixing the panel to the frame, space the nails/or screws approximately 200 to 300mm apart; 50mm from the side where possible, but not less than 10mm, and no less than 10mm from the top and bottom of the panel.
- Panels can be nailed by hand or nail gun or screwed into place.
- A centre out pattern is recommended. If this is not achievable, fix along one side of the panel and work across.



- The panels join using a tongue and groove system. Do not forcefully hit the sheets together.
- Ensure an allowance of 1mm expansion gap for every metre of horizontal wall covered. For example, a horizontal wall length of 7m will require an expansion gap of 7mm applied to both ends of the wall (3.5mm at the start and 3.5mm at the end of the wall installation).



- Repeat the previous steps to complete the installation of the next panel.
- To finish the installation, cut the final panel using your measurements and fix into position. Once the panels are fixed to the wall, remove the spacers.

Step 4: Finishing



- Use putty to fill in any nail or screw holes, allow adequate drying time before you sand and paint.
- Lightly sand all surfaces to be coated to obtain a smooth and even finish. Use a sanding sponge or progressively use finer grit sandpaper to achieve a smooth edge free of damage, cracks, dents or notches.
- Care must be taken not to abrade the decorative routed areas as this may result in permanent damage of the surface to be painted.



- Lastly, install skirting boards, cornices and dado rails as necessary.



- Your wall is now ready to paint in your colour of choice.
- Surround by Laminex decorative panels are pre-primed (face only) with a water-based paint.
- Make sure you follow your paint manufacture's preparation and application guidelines including checking if the pre-finished base primer is suitable for the intended painted finish.
- **If you are installing Surround by Laminex in a Internal Moisture Area, follow the additional sealing / priming and painting instructions in section 6.9 of the Fabrication & Installation Manual.**

NOTE: Fire Resistant product (E1 MDF FR) is prohibited for use in Internal Moisture Areas.

Watch our simple step by step installation videos at laminex.co.nz

Technical and warranty information

All technical information including Fabrication & Installation Manual, Safety Data Sheet, Technical Data Sheet and Limited Product Warranty can be found at laminex.co.nz

Surround by Laminex™ products have a 7 year limited warranty.

VISIT US
laminex.co.nz

CALL US
0800 303 606

SAMPLES
laminex.co.nz
or **0800 999 939**

FOLLOW US
@laminexnz
@nzlaminex

© Copyright 2023, Laminex New Zealand™. SURROUND by Laminex™ and Laminex New Zealand™ are registered trademarks of Laminex New Zealand™ or its related company licensors. SURROUND by Laminex™ is marketed and distributed by Laminex New Zealand™, a division of Fletcher Building Products Ltd. 802216006 | 03.23

SURROUND
by Laminex™

Laminex™
NEW ZEALAND